

F90 Series (Rate Indicators / Controllers)

INSTRUCTION MANUAL


FEATURES







| | | |
|---|--|---|
| <p>DIN 48 × 96mm</p> | <p>1 / TAU</p> | <p>Prescale</p> |
| <p>DIN 48 × 96mm Standard Panel Size</p> | <p>High precision, from low speed to high speed by 1/TAU. Measuring range is 0.11Hz ~ 20kHz.</p> | <p>Available to multiplier and divider at once, correspond to any revolution ratio and circumference ratio.</p> |
| <p>Monitor & Preset Type</p> | <p>Input</p> | <p>Analog Output</p> |
| <p>1. Monitor type with the large display 2. Preset Type can make the upper/lower limit output.</p> | <p>Correspond to each input mode of Contact, Open Collector, Voltage and Magnetic Sensor</p> | <p>With option, prepared the Analog output</p> |
| <p>Decimal Point Positioning</p> | <p>Up-Date Time</p> | <p>Key Lock and Output Inhibition</p> |
| <p>By selecting the decimal point position, it will be available to display the measured data of below the decimal point.</p> | <p>Regardless of sampling time, it will be available to set the up-date time.</p> | <p>By easy wirings, key lock (front key operation lock) and output inhibition are available.</p> |

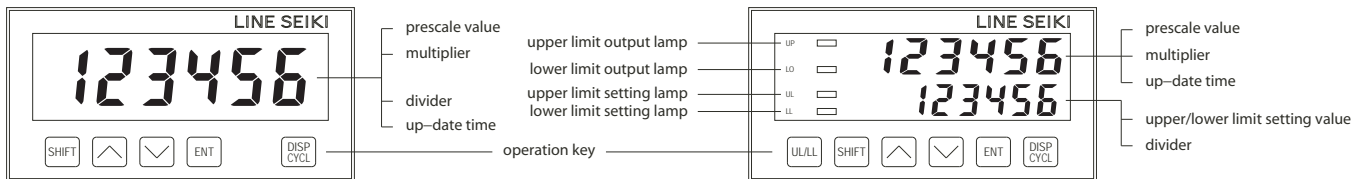
MODELS

| MODEL | FUNCTION | NUMBER OF DIGITS | SETTING DIGITS | ADDED FUNCTION |
|---------|--------------|------------------|----------------|----------------|
| F90-101 | Monitor Type | 6 | — | — |
| F90-103 | | 6 | — | ANALOG OUTPUT |
| F90-201 | Preset Type | 6 | 6 | — |
| F90-203 | | 6 | 6 | ANALOG OUTPUT |

FRONT PANEL & DIP-SWITCH



-  : Alternate display of upper limit and lower limit value.
-  : Enter to mode and change digit for editing. Call of the prescale value. Used for the decimal point positioning.
-  : Increase the numerical value of the setting digit. Used for the decimal point positioning.
-  : Decrease the numerical value of the setting digit. Used for the decimal point positioning.
-  : Memory of the selected numbers. Call of the prescale value.
-  : Call of the up-date time.

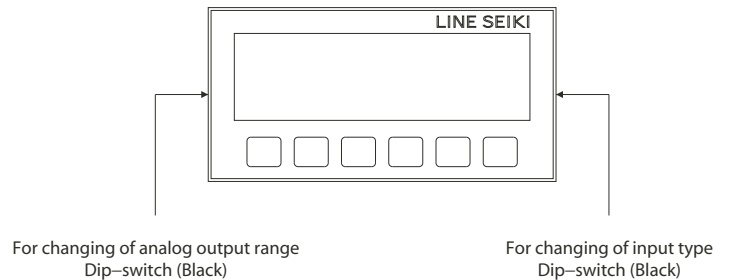

■ EDITING

< PRESCALE VALUE >

For prescale, both multiplier and divider can be set.
The formula on displayed value and the prescale value is the following

$$\text{Display Value} = \frac{\text{Multiplier}}{\text{Divider}} \times \text{Number of Input Pulse}$$

For example, in case of fitting the 200 ppr encoder on the roller which circumference is 50 cm and making the roller's surface speed display at cm/min, set the multiplier at 50 and divider at 200.

| OPERATION | EXPLANATION OF OPERATION | MONITOR TYPE : F90-101 , 103 | PRESET TYPE : F90-201 , 203 |
|-----------|--|---|-----------------------------|
| + | Press key and with key pressed. Present prescale value will be displayed. The display returns to measuring mode if key is pressed or key is not pressed within 3 seconds while present prescale value appears. | | |
| | Press key to enter multiplier editing mode and make the leftmost digit blink. | | |
| | Press key 5 times or continue to press to set the leftmost digit to be 5. | | |
| | Press key once to make the next digit flash. | | |
| | Press key once to set 0 to this flashing digit | | |
| | Press key 6 times or continue to press to shift the flashing digit for editing. | Press key while the rightmost digit of the multiplier is flashing. Then, the display will enter divider editing mode and the leftmost digit will blink. | |
| | Press key twice to set 2 to this flashing digit. | | |
| | Press key twice to shift flashing digit for editing. | | |
| | Press key once to set 0 to this flashing digit. | | |
| | Press key to stop flashing of digit and memory the selected numbers. The display returns to measuring mode after 3 seconds automatically or by pressing key again. | | |

In case of setting the multiplier to be 00.0000, this means the multiplier is 100.

In case of setting the divider to be 0000, this means the divider is 1.

< UP-DATE TIME >

By setting the up-date time, the display can be renewed at reasonable time without renewing the display in every sampling.
For example, if you hope that display renews every 28 seconds, set 28 for the up-date time.

| OPERATION | DESCRIPTION | MONITOR TYPE : F90-101 , 103 | PRESET TYPE : F90-201 , 203 |
|-----------|---|------------------------------|-----------------------------|
| | Press key to display present up-date time. The display returns to measuring mode if key is pressed or key is not pressed within 3 seconds while present up-date time appears. | | |
| | Press key to enter editing mode and make the left digit flash. | | |
| | Press key twice to set 2 to this flashing digit. | | |
| | Press key once to shift flashing digit for editing | | |
| | Press key twice to set 8 to this flashing digit | | |
| | Press key to stop flashing of digit and memory the selected numbers. The display returns to measuring mode after 3 seconds automatically or by pressing key again. | | |

In case of setting the up-date time to be 00, this means the up-date time is equal to the sampling time.
In case of except for 00, the display shows newest measured data every up-date time passed.
But it shows newest measured data at once if the status of upper or lower output is changed by comparing calculation of every sampling time.

< DECIMAL POINT POSITIONING >

By using the decimal point positioning function, the display can shows up to the 4th digit below decimal point of measured data.
In case of the upper/lower limit type, the decimal point position of preset display shifts automatically corresponding to the decimal point of measuring display.

| OPERATION | DESCRIPTION | MONITOR TYPE : F90-101 , 103 | PRESET TYPE : F90-201 , 203 |
|-----------|--|--------------------------------------|--------------------------------------|
| + | Whenever key is pressed while both and key are pressed, decimal point shifts and be determined. | ↓ ↓ ↓ ↓ | ↓ ↓ ↓ ↓ |

< UPPER / LOWER LIMIT OUTPUT >

F90–201, 202, 203 can set upper lower limit to compare with measured data and to output.
For example, when output for upper limit should be at 180000 and output for lower limit should be at 9200, set upper limit for 180000 and lower limit for 9200.


| OPERATION | DESCRIPTION | UPPER LIMIT 180000 |
|-----------|--|-----------------------|
| | Press key to display preset upper limit value and to turn the UL lamp. | |
| | Press key once to make the leftmost digit flash. | |
| | Press key once to set this flashing digit for 1. | |
| | Press key once to shift flashing digit for editing. | |
| | Press key twice, to set this flashing of digit for 8. | |
| | Press key to stop flashing of digit and to memory the selected numbers. | |

| OPERATION | DESCRIPTION | UPPER LIMIT 180000 |
|-----------|--|-----------------------|
| | Press key to display preset lower limit value and to turn the LL lamp. | |
| | Press key three times to make the 4th digit. | |
| | Press key 9 times to set this flashing digit for 9. | |
| | Press key once to shift flashing digit for editing. | |
| | Press key twice, to set this flashing digit for 2. | |
| | Press key to stop flashing of digit and to memory the selected numbers. | |

Regardless of up-date time, the measured data is compared with the upper/lower limit value in every sampling time.
In this case, displayed data of 6 digits which is decided to be displayed by decimal point positioning function is compared with upper or lower limit data, and not displayed data is no concern with comparison.

■ MEASURED DATA AND COMPARED OUTPUT

Example : Upper Limit = 180000
Lower Limit = 9200

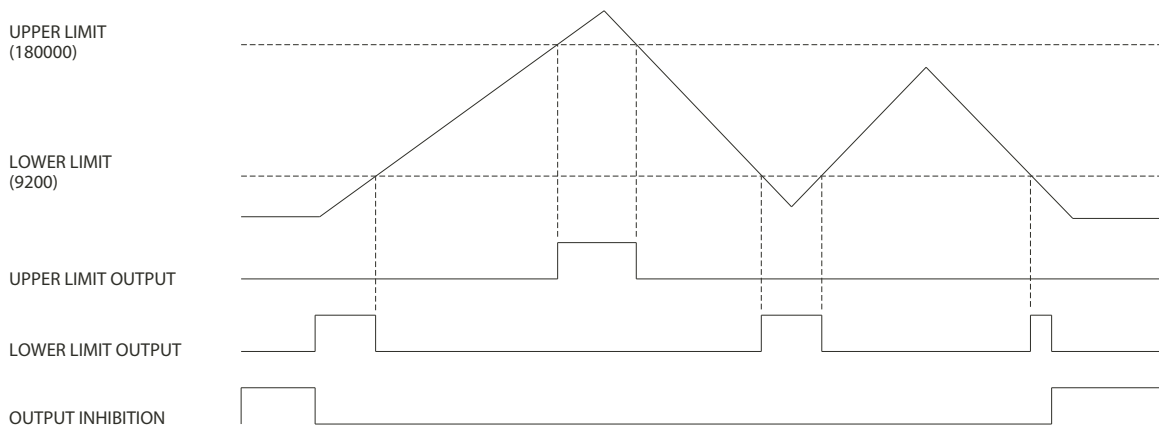

Upper limit \leq measured data ; make upper limit output ON and short N. O. and COM of relay (terminal No.①① and ①②).

Upper limit $>$ measured data ; make upper limit output OFF and short N. C. and COM of relay (terminal No.①③ and ①②).

Lower limit \geq measured data ; make lower limit output ON and short N. O. and COM of relay (terminal No.①④ and ①⑤).

Lower limit $<$ measured data ; make lower limit output OFF and short N. C. and COM of relay (terminal No.①⑥ and ①⑤).

If inhibition output is ON, upper limit output turn to OFF at the lowest sampling time.




















■ WIRING AND REAR TERMINALS

| Type | Monitor Type | Upper / Lower Limit Preset Type |
|------------------------|--|---|
| Model | F90-101, 103 | F90-201, 203 |
| Rear Terminals | <p>* F90-103 ONLY</p> | <p>* F90-203 ONLY</p> |
| Power Source and Earth | <p>Supply 100 ~ 240VAC to terminal No. ①⑨ and ①⑩ . Earth terminal No. ①⑧ in case of need.</p> | |
| Input | <p>CONTACT</p> <p>OPEN COLLECTOR</p> <p>VOLTAGE PULSE</p> <p>MAGNETIC SENSOR - (NPN)</p> <p>By type of input signal, set dip-switch (Black) on your right side.</p> | |
| Comparison Output | | <p>①⑪, ①⑫, ①⑬ : UPPER LIMIT OUTPUT ①⑭, ①⑮, ①⑯ : LOWER LIMIT OUTPUT</p> |
| Output Inhibition | | <p>CONTACT INPUT</p> <p>OPEN COLLECTOR INPUT</p> <p>Short terminal No. ④ and ⑤, comparison output mode will be inhibited.</p> |
| Key Lock | <p>CONTACT</p> <p>OPEN COLLECTOR INPUT</p> <p>Short terminal No. ⑥ & ④, the change of upper / lower limit and up-date time will be disabled (except monitor type). Short terminal ⑦ & ④, the change of prescale will be displayed.</p> | |
| Analog Output | <p>- Terminal No. ⑧ ; current output - Terminal No. ⑨ ; voltage output - Terminal No. ⑩ ; common of analog output (Select current output or voltage output)</p> <ul style="list-style-type: none"> • Select the key of output by dip-switch (Black) on your left side. • Analog output is adjusted by the volume beside dip-switch. • Analog output is converted directly from frequency of input signal, and no concerned with prescaler function. | |

Do not use the terminal No. 5, 6, 11 ~ 17 of F90-101, 103 and the terminal No. 17 of F90-201, 203
Writing of terminal No. 8, 9, 10 for analog output is available for model F90-103, 203 only.

SETTING FOR SAMPLING TIME

The sampling time can be set in the range of the following diagram.

- | | KEY OPERATION | DISPLAY | NOTE |
|----|--|--|---|
| 1. |  +  |  (Existing setting value) * This value is set to 0 on ex-factory. | The cross reference between setting value and sampling time is following diagram. |
| | When the display is indicating the measuring display, press  key and  key at the same time | | |
| 2. |   →    →  | | (If the  or  is not pressed within 3 secs, the display returns to the measuring display automatically.) |
| | Press  or  key to blink existing setting value. By using these keys, select the favorite setting value. | | |
| 3. |   | | The display returns to the measuring display by pressing  key, or 3 sec later automatically. |
| | Press  key to make setting value memorize. | | |

CROSS REFERENCE BETWEEN SETTING VALUE AND SAMPLING TIME

| Setting Value | Sampling Time (seconds) | Minimum Input Frequency (Hz) | Converging Time (seconds) |
|---------------|-------------------------|------------------------------|---------------------------|
| 0 | 0.5 ~ 10 | 0.1000 | 10 ~ 20 |
| 9 | 0.5 ~ 9 | 0.1112 | 9 ~ 18 |
| 8 | 0.5 ~ 8 | 0.1250 | 8 ~ 16 |
| 7 | 0.5 ~ 7 | 0.1429 | 7 ~ 14 |
| 6 | 0.5 ~ 6 | 0.1667 | 6 ~ 12 |
| 5 | 0.5 ~ 5 | 0.2000 | 5 ~ 10 |
| 4 | 0.5 ~ 4 | 0.2500 | 4 ~ 8 |
| 3 | 0.5 ~ 3 | 0.3334 | 3 ~ 6 |
| 2 | 0.5 ~ 2 | 0.5000 | 2 ~ 4 |
| 1 | 0.5 ~ 1 | 1.0000 | 1 ~ 2 |

Converging time means the time duration to make the display showing 0 after input pulse ends. Shortest converging time is equal to the sampling time and longest one is double of sampling time. For a sampling time and converging time, refer to the cross reference between setting value and sampling time.

DIP-SWITCHES

For Input Switch (Black)

| Input | No. | SW1 | SW2 | SW3 |
|-----------------------|-----|-----|-----|-----|
| Open Collector Input | | OFF | OFF | OFF |
| Voltage Input | | ON | OFF | OFF |
| Magnetic Sensor Input | | ON | ON | OFF |
| Contact Input | | OFF | OFF | ON |


For analog output range (Black) F90-103, 203

| Range | No. | SW1 | SW2 | SW3 | SW4 | Voltage Output | Current Output |
|---------------|-----|-----|-----|-----|-----|------------------------------------|---|
| 20Hz ~ 200Hz | | OFF | OFF | ON | ON | 1 - 10V (frequency Hz X 0.05V) | 5.6 - 20mA (frequency Hz X 0.08mA + 4mA) |
| 20Hz ~ 2kHz | | OFF | ON | OFF | OFF | 0.1 - 10V (frequency Hz X 0.005V) | 4.16 - 20mA (frequency Hz X 0.008mA + 4mA) |
| 200Hz ~ 20kHz | | ON | OFF | OFF | OFF | 0.1 - 10V (frequency Hz X 0.0005V) | 4.16 - 20mA (frequency Hz X 0.0008mA + 4mA) |

SPECIFICATIONS

| | | |
|--------------------------------------|---|---|
| Type | Monitor Type | Upper / Lower Limit Preset Type |
| MODEL (Additional Function) | F90-101 F90-103 (ANALOG output only) | F90-201 F90-203 (Upper Limit, Lower Limit and ANALOG output) |
| Display | Red LED 14.22 × 7.8mm | Measuring Display: Red LED 10.0 × 5.5mm Preset Display: Green LED 8.0 × 4.0mm |
| Number of Digits | 6 | |
| Display Range | 0.0001 ~ 999999 | |
| Decimal Point Position | Maximum : Decimal point 4th | |
| Scale Range | 0.11Hz ~ 20KHz (1 pulse/ revolution : 6.6667rpm ~ 120000rpm) | |
| Preset Level | _____ | Upper / Lower Limit |
| Measuring Method | 1/TAU standard sampling : X'tal 2MHz ± 50ppm | |
| Measuring Accuracy | ±0.008% reading ±1 digit (multiplier = 1.0000, divider = 1) | |
| Sampling Time | 0.5 ~ 10 seconds (sampling time is changed automatically by pulse interval.) | |
| Up-date Time | Every sampling or 1 ~ 99seconds (maximum) | |
| Input Signal | Contact input : sink current 2mA Open collector input : sink current 2mA Voltage input : input impedance 3KΩ Magnetic sensor input : input impedance 3KΩ | L : 0~1.9V L : 0~1.9V L : -0.6 ~ -17 H : 3.5 ~ 30V (P-P3.5Vmin.) H : 0.6 ~ 17V |
| Input Frequency | Contact input : 0.11Hz ~ 25Hz Open collector or Voltage input : 0.11Hz ~ 20KHz Magnetic sensor input : 0.11Hz ~ 20KHz | minimum pulse width 20μsec minimum pulse width 25μsec minimum pulse width 25μsec (L : -0.6Vmax., H : 0.6Vmin) |
| Prescale | Multiplier : 0.0001 ~ 100 Divider : 1/1 ~ 1/9999 (available to use at the same time) | |
| Overflow | At every sampling, when the measured data is over 6 digits"-----" is displayed | |
| Memory | Prescale value, upper/lower limit value and up date time are reserved for 10years by E ² PROM (rewrite 10000 times) | |
| Keylock | Prescale value, upper/lower limit value (exclude monitor type) and up date time are inhibited to be changed. Contact input • Open collector input (sink current 7mA L : 2Vmax) | |
| Output Inhibition | _____ | Upper / Lower Limit output inhibition Contact input • Open Collector input (sink current 7mA L : 2Vmax) |
| Upper / Lower Output | _____ | Each 1C relay contact (250VAC 0.5A/30VDC 2A ; load) |
| Analog Output (For type 103, 203) | Frequency voltage converter method Voltage Output : 0.1 ~ 10V (1KΩ min.) ±0.5%FS Current Output : 4.16 ~ 20mA (500Ω max.) ±0.5%FS Output Ripple : 20mVp-p max. 3 types of range, 20Hz ~ 200Hz, or 20Hz ~ 2KHz, 200Hz ~ 20KHz can be selected by dip-switches (Select voltage output or current output). | |
| Sensor Supply Power Source | 12VDC ±10% 100mA max. (Analog output is 50mA maximum) | |
| Power Supply | 100 ~ 240VAC -15% +10% (85 ~ 264VAC) 50/60Hz | |
| Power Consumption | Approximately 6VA | |
| Operating Temperature | -5 ~ 50°C (Non freezing) | |
| Operating Humidity | 45 ~ 85% RH (Non condensing) | |
| Front Panel | IP54 Standard | |
| Weight | Approximately 280g | |

DIMENSIONS – MILLIMETERS

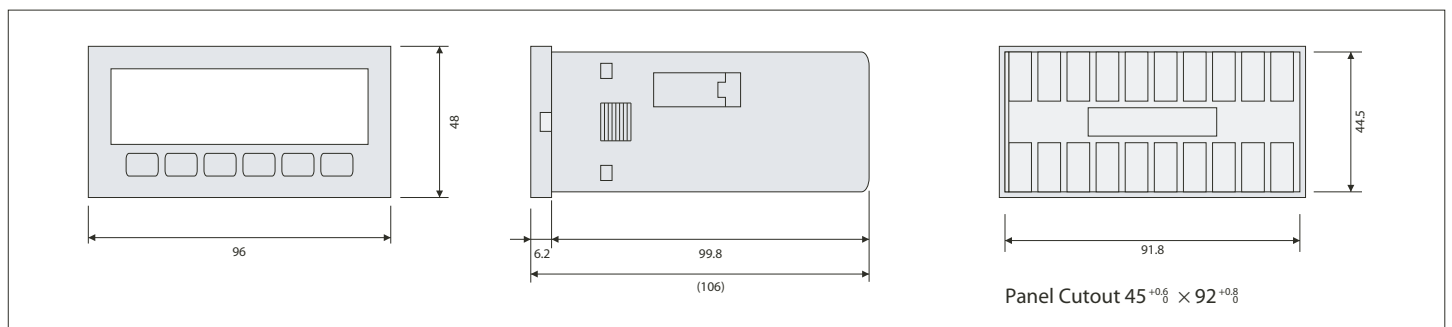

LINE SEIKI CO., LTD

37-7, CHUO-CHO, 2-CHOME
 MEGURO-KU, TOKYO
 JAPAN 152-0001
 TEL: +83-3-3716-5151
 FAX: +83-3-3710-4552
 E-MAIL: webtrade@line.co.jp
 URL: http://www.lineseiki.com

This manual was last revised March. 25, 2010. 4F90001C
 *Subject to change without prior notice.
 All Rights Reserved, Copyright © 2010, LINE SEIKI CO., LTD.